



Productivity Inc®

**Haas TL-25 PRE-INSTALLATION CHECKLIST – Rev 1/2009**

Installation of your new Haas TL-25 can be smooth and rapid if preparations are made prior to the delivery of your machine. Any questions regarding machine installation should be directed to our service department for clarification. We hope this checklist will aid in a rapid installation of your new machine. **NOTE: The following must be completed prior to our service technician arriving to install your new machine.**

- Power Requirements for your machine: 230v/3ph/28kVa, 100 amps (\*460v/3ph/28kVa, 50 Amps)  
 Proper voltage per machine specifications should be ready at machine site. **Do NOT power up machine. A separate earth ground wire of the same conductor size as the input power must be connected to the chassis of the machine; must be supplied from the main plant ground. A local cold-water pipe or ground rod is not sufficient.**  
 \*460v requires an External Transformer.

**NOTE REGARDING 1000 PSI High Pressure Coolant - You will need a separate power source. 208-230v/3ph/20 Amp circuit needed for the unit. The CNC does NOT provide the power source. Any questions, please contact our service department.**

- Customer should furnish/have available the proper supply/types of lubricants required for machine operation.

ITEM	CAPACITY	FLUID TYPE
Coolant	50 gallons	Water Soluble, synthetic
Way Lube	2 QT	Mobil Vactra #2

You will need to have Coolant and lubricants on hand at the time of installation. Contact our Service Department for more information.

- Air lines should be routed to the machine location and operational for proper air pressure.

The Lathe requires a minimum of 100 PSI at 4 cfm at the input to the pressure regulator on the back of the machine. This should be supplied by at least a 1-HP compressor, with a minimum 20-gal tank, that turns on when the pressure drops to 100 PSI. The air must be supplied through a minimum 3/8" hose and fittings must be at least 1/4" NPT.



- Machine location should be planned to allow enough room for access panels to be opened and serviced with ease. A minimum of 36" around the machine is required for operator and maintenance access.
- Weight requirements should be checked to insure that the surface below the machine will have sufficient strength for support and stability. The machine must be set on a solid, sound and stable, steel bar-reinforced concrete slab poured directly on the grade. In general, the 6" concrete floor on industrial buildings is suitable for machine placement.
- **NOTE: THE HAAS LATHE CANNOT BE CRANED WITHOUT PURCHASING THE LIFTING KIT, INSTALLED AT THE FACTORY AT TIME OF MANUFACTURE, OR IT MUST BE LIFTED WITH FORKLIFT. CONTACT YOUR SALESPERSON OR LOCAL SERVICE DEPARTMENT FOR MORE INFORMATION.** Upon arrival of your machine, unpack and immediately check for visible damage.

SHIPPING WEIGHT	SHIPPING DIMENSIONS OF MACHINE
16,960# (Machine Weight)	13'8" L x 8'6" W x 8'2" H (Machine on skid and packed)
2,085 # (Barfeeder)	8'6" L x 6' W x 7' H (Optional Bar feeder skidded and packed)
675 # (Chip Conveyor)	7'3" L x 2'6" W x 3'2" H (Chip Conveyor on skid/boxed)
Operational: 16,000 # (Mach Oper) 900 # (BF Oper) See attached for operational dimensions.	

- **Remove as much preservative from the machine as possible without having to power up (tables – slides, pulleys, etc.). We recommend mineral spirits to clean. Apply oil when finished to prevent rust.**


**PLEASE FORWARD THIS TO THE APPROPRIATE PERSON. THANK YOU.**










## TL-25 Dimensions

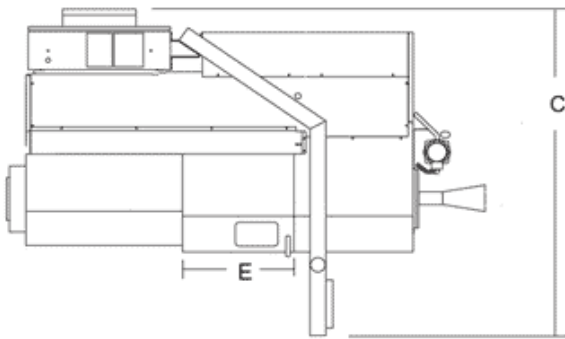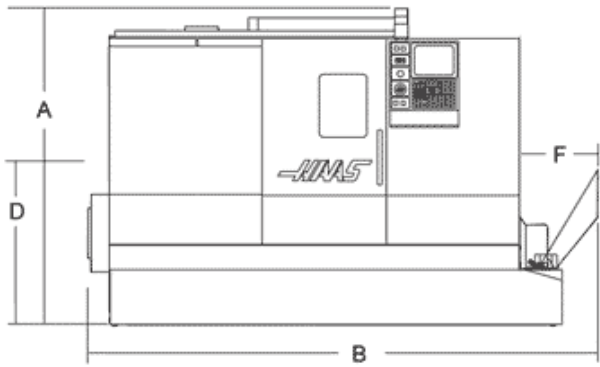


		Mix View
A	74 "	
B	150 "	
C	100 "	
D	43 "	
E	33 "	
F	15 "	

### Optional Servo Bar 300 Footprint:

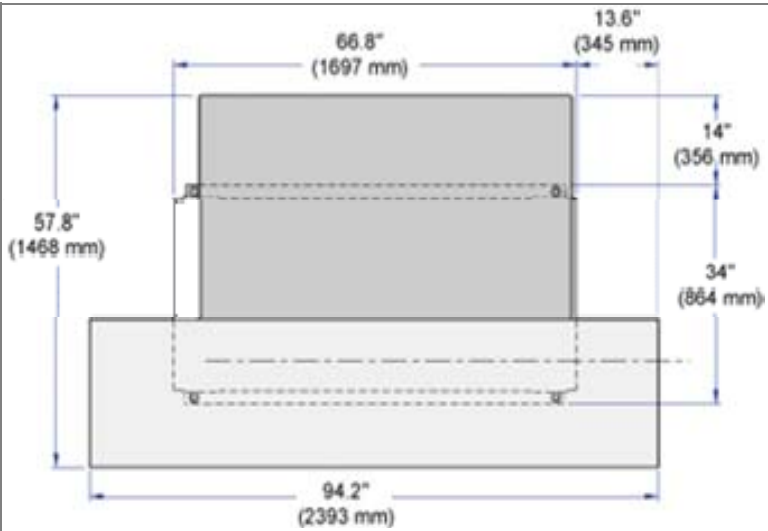

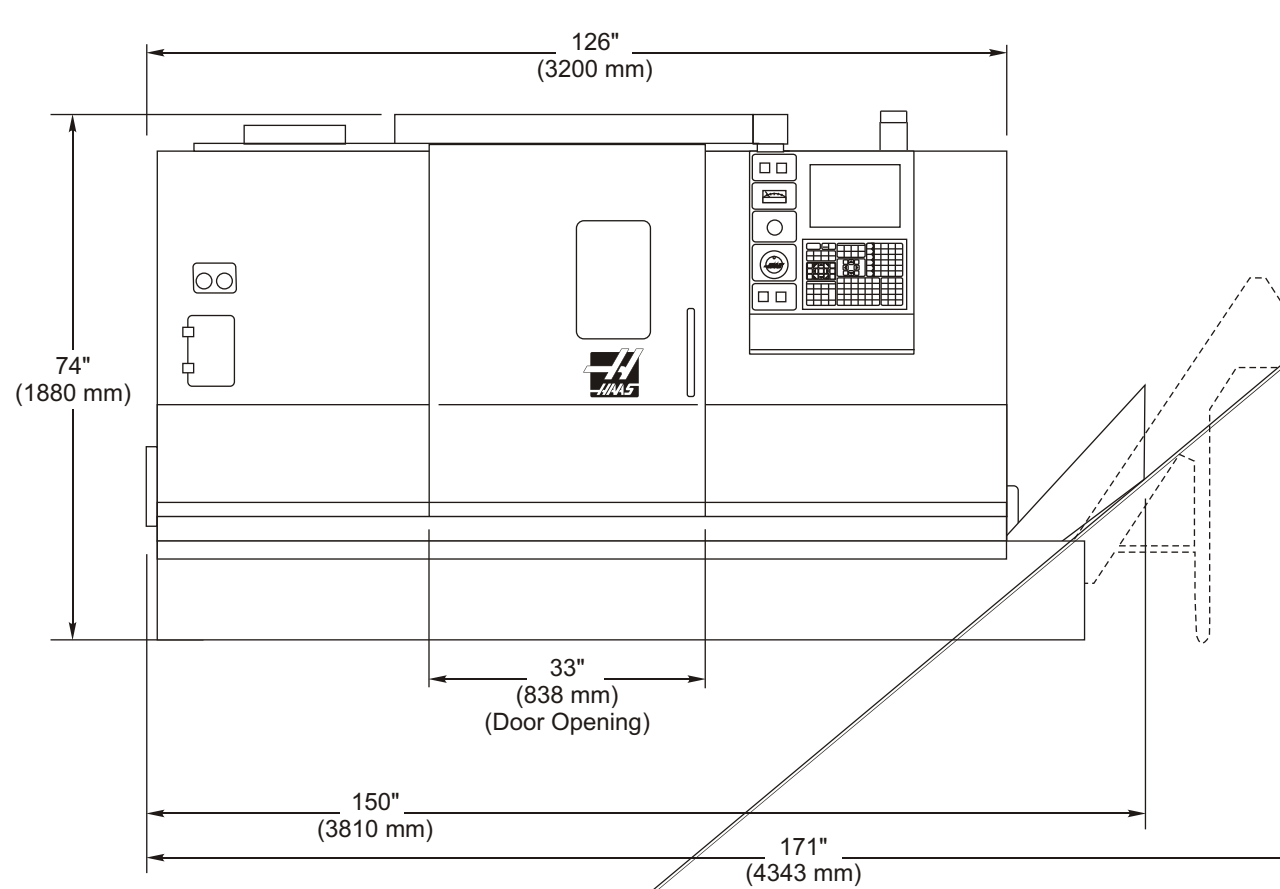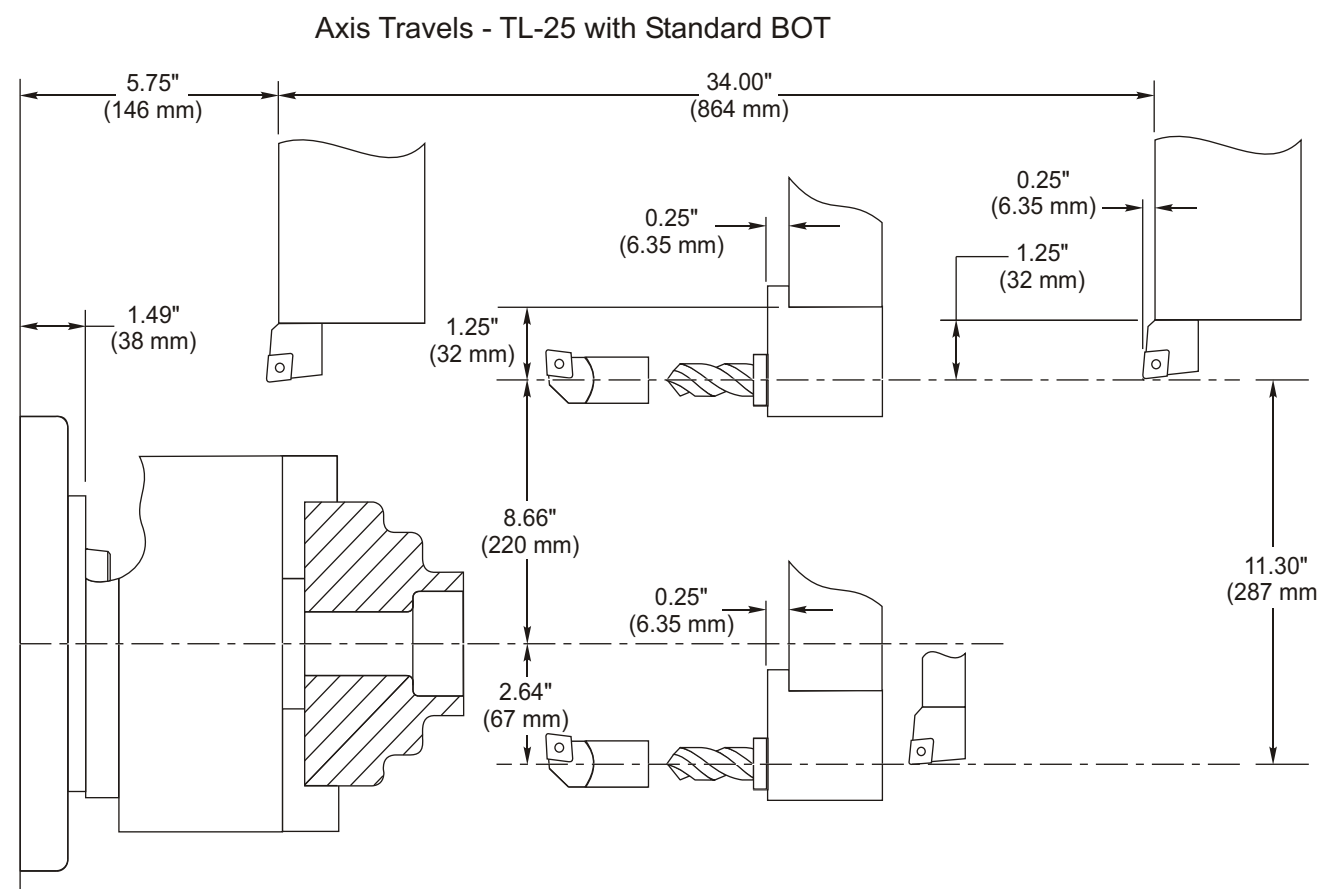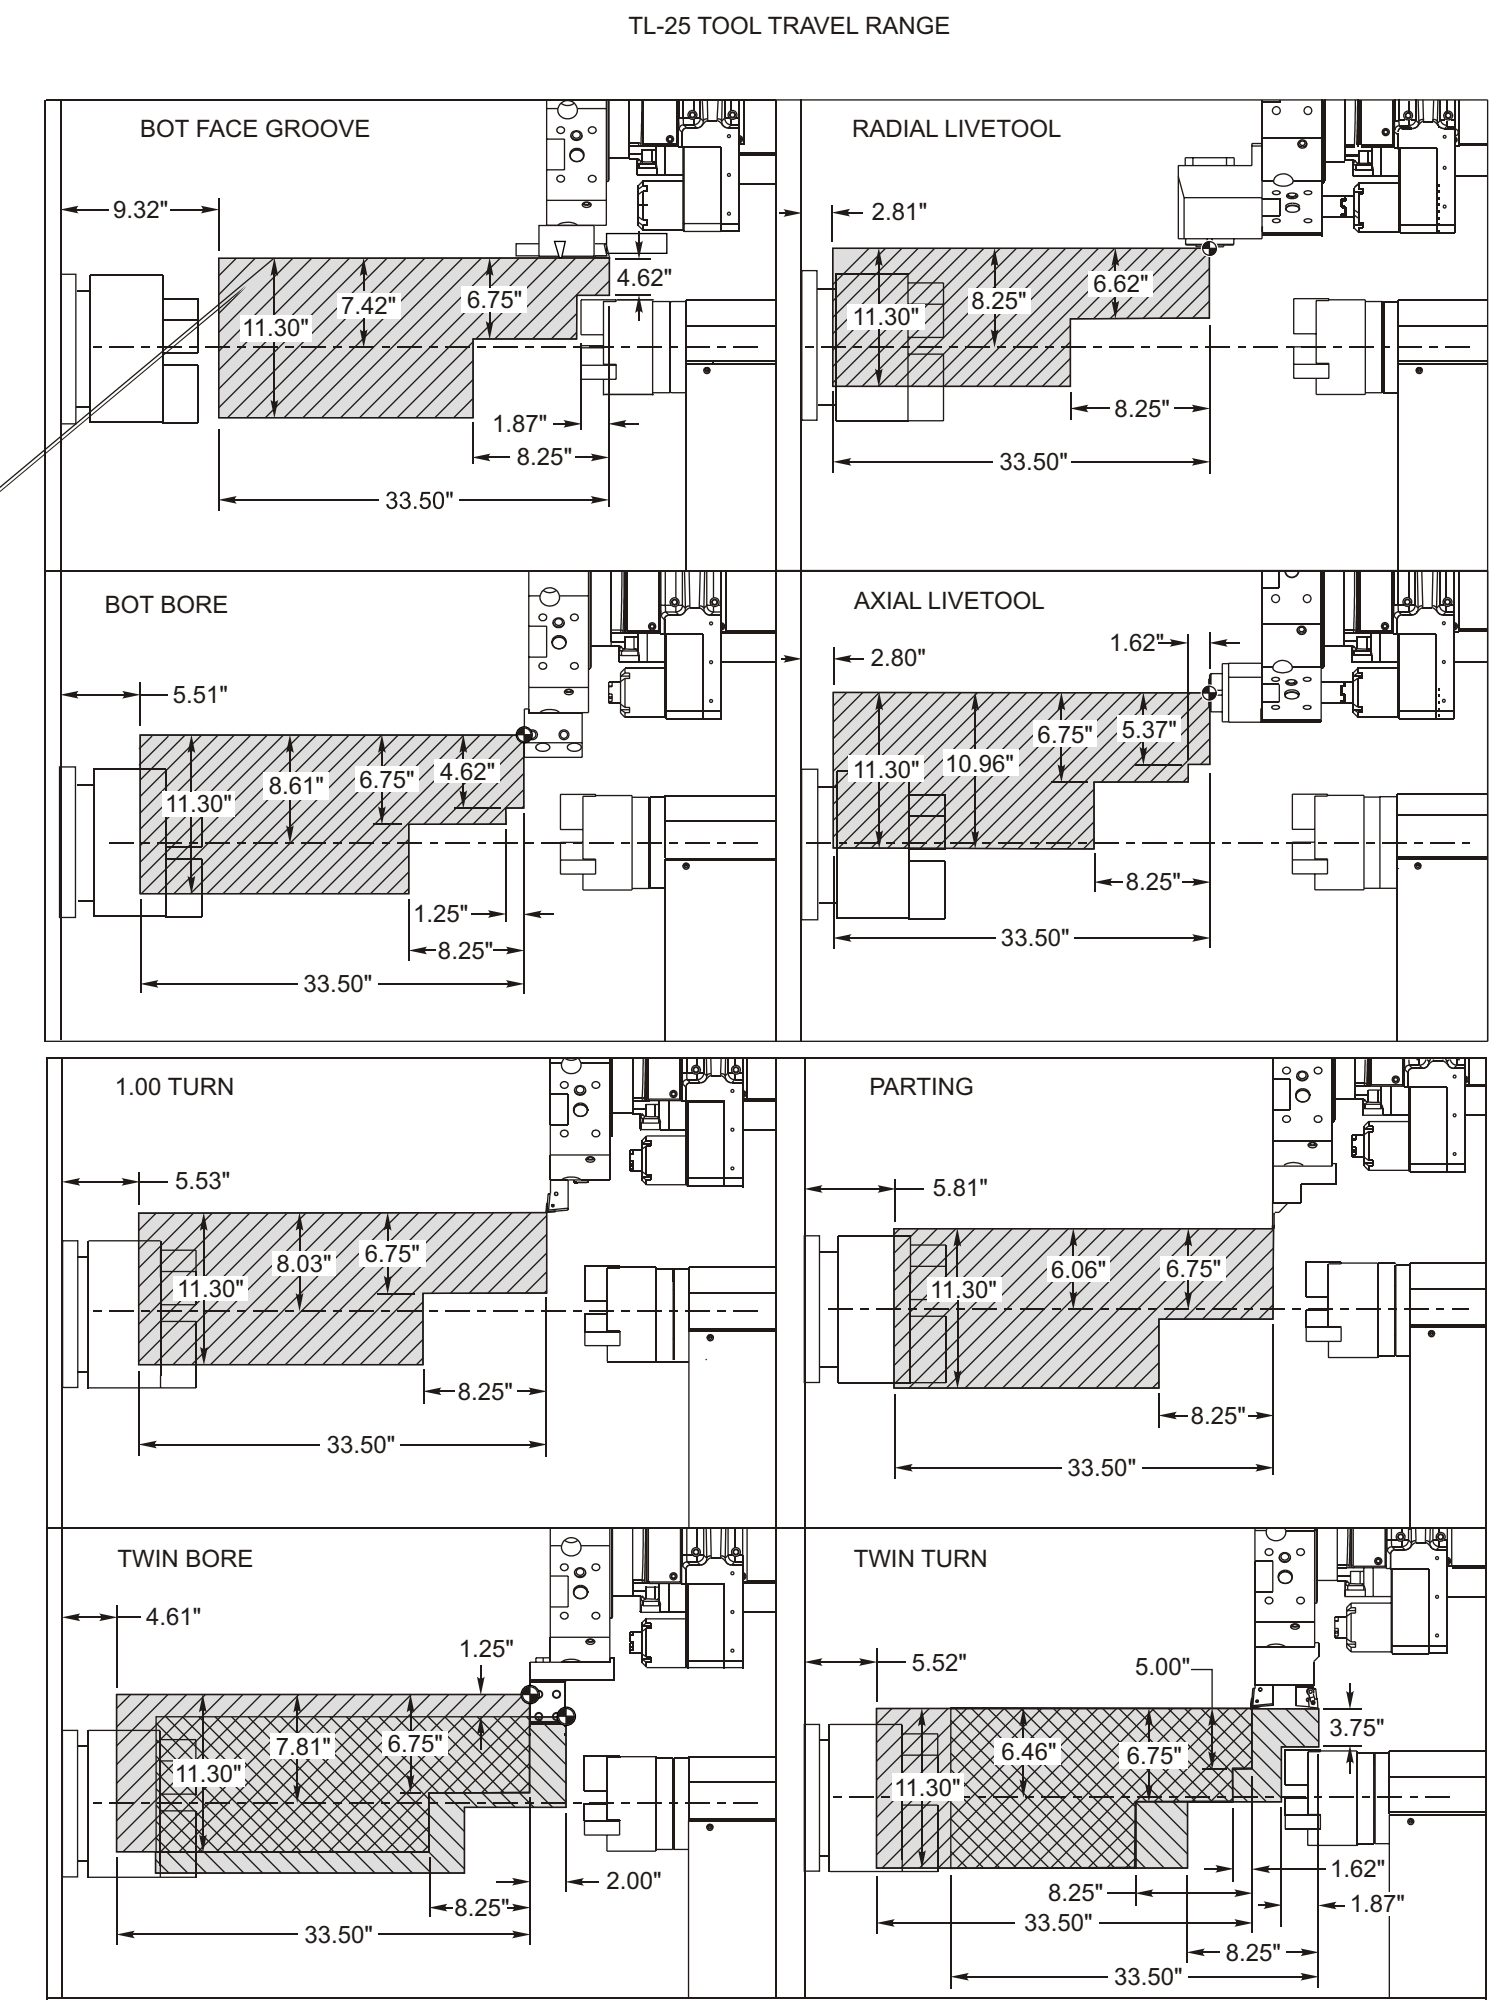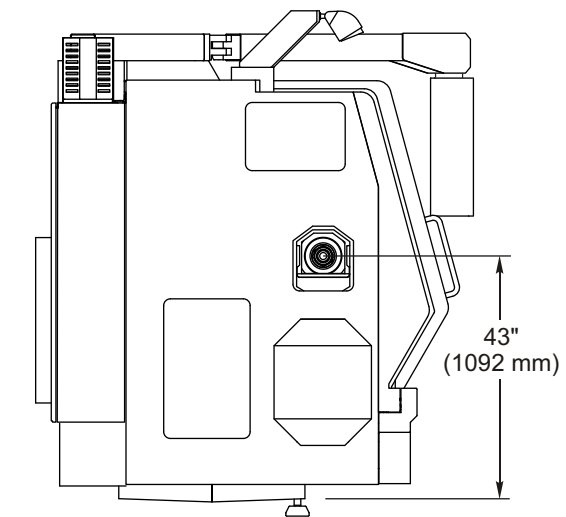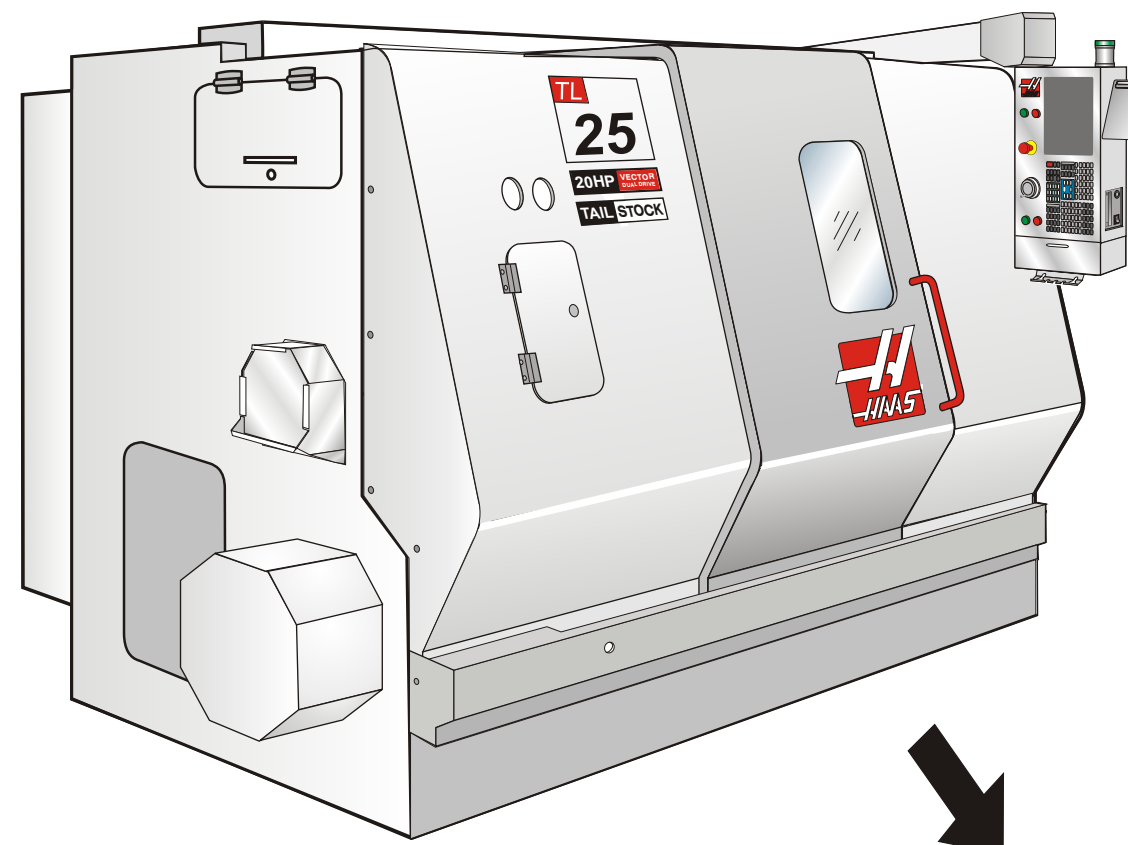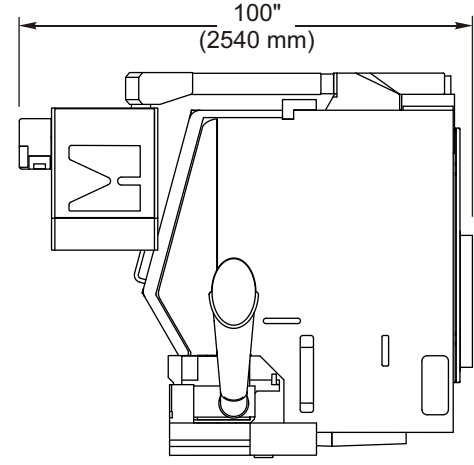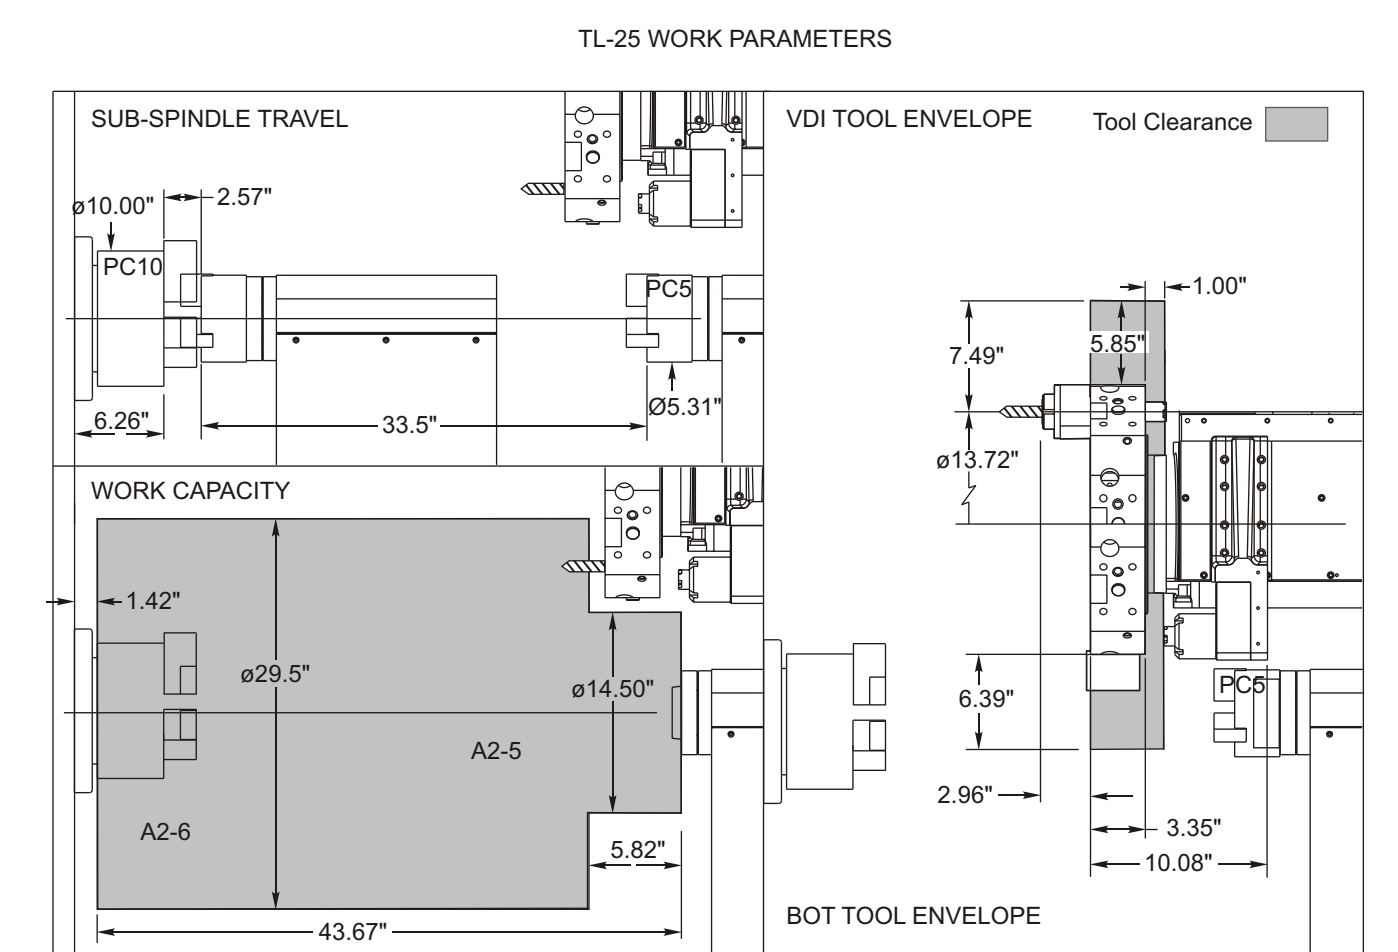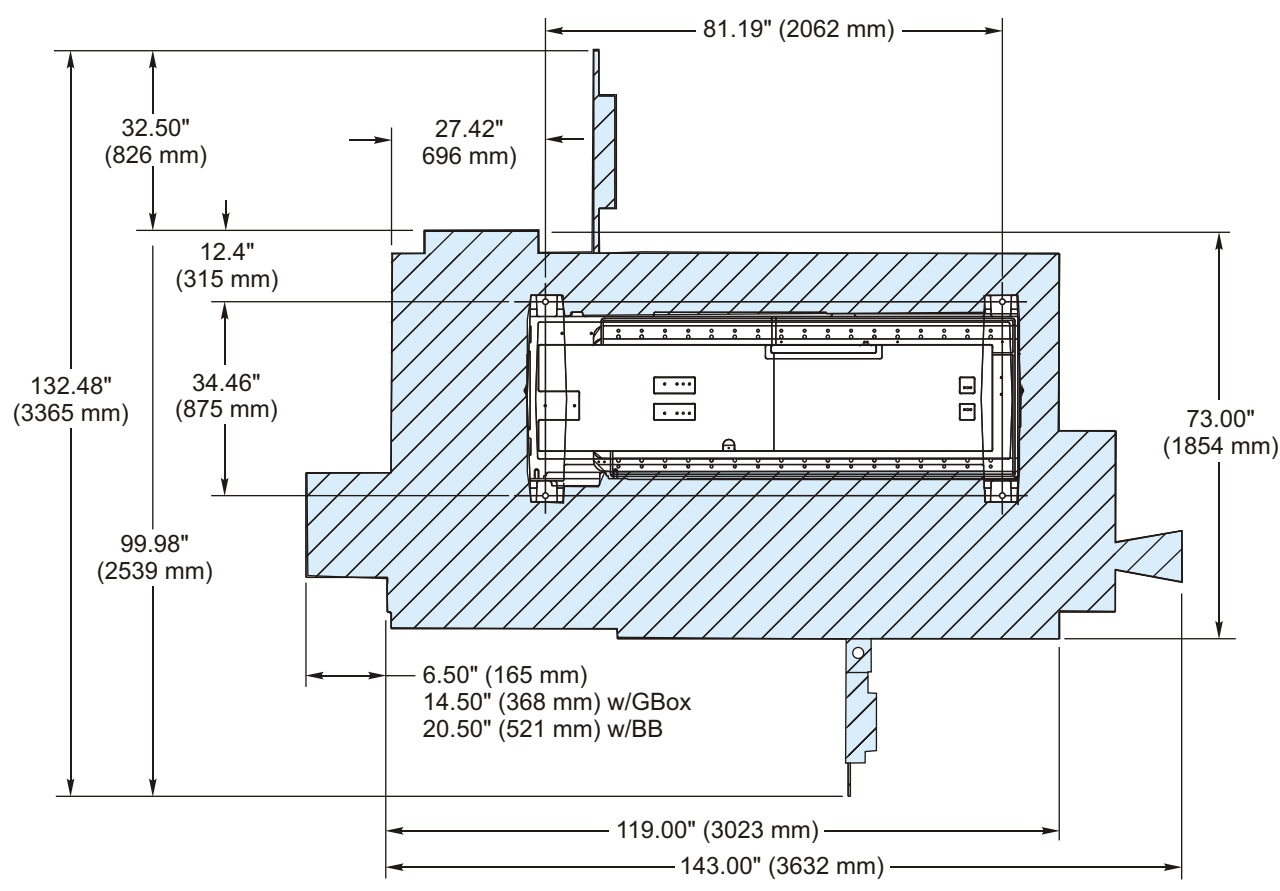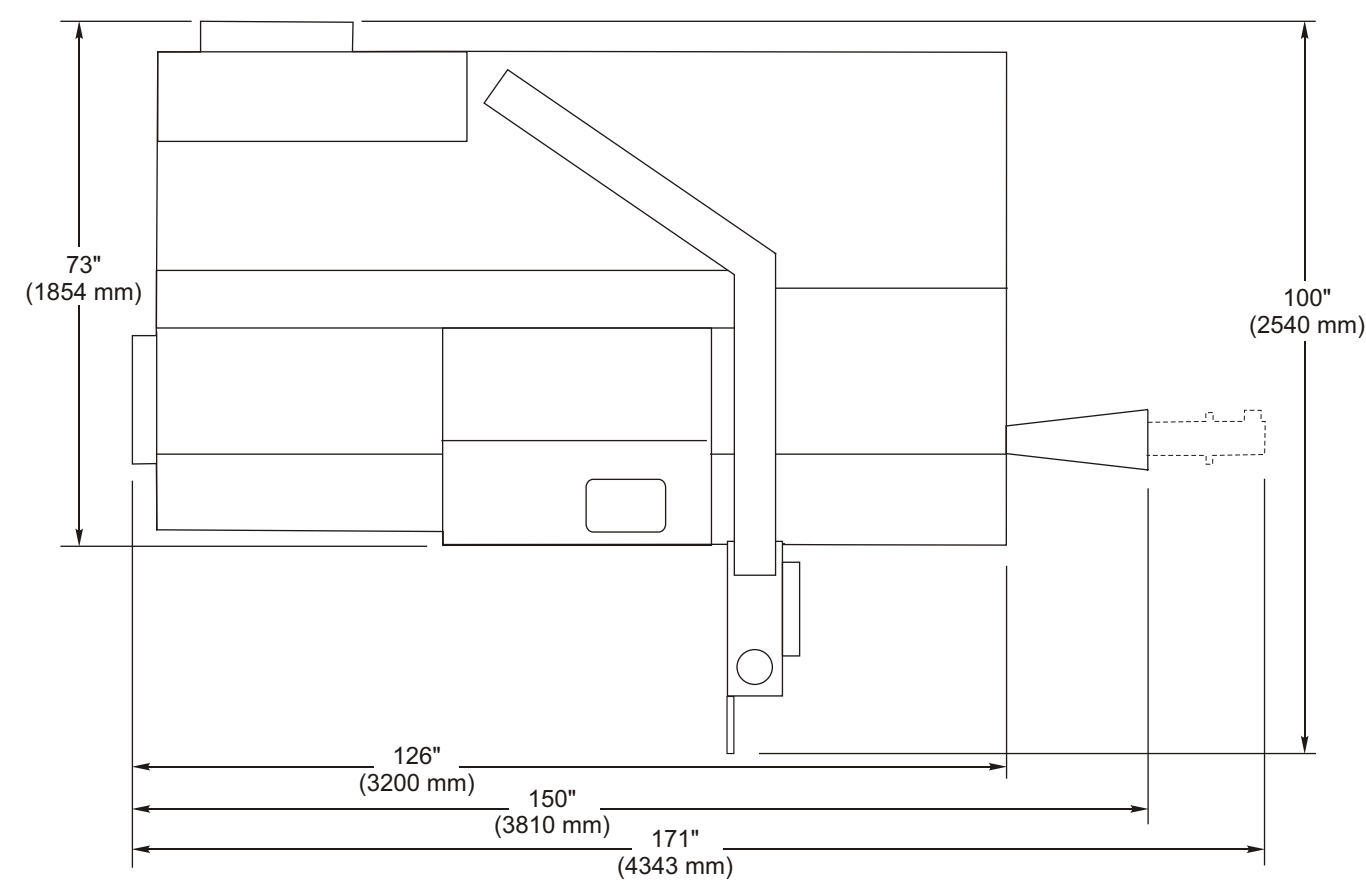

Turret Tooling Clearance - TL-25 with Standard 12-Pocket BOT

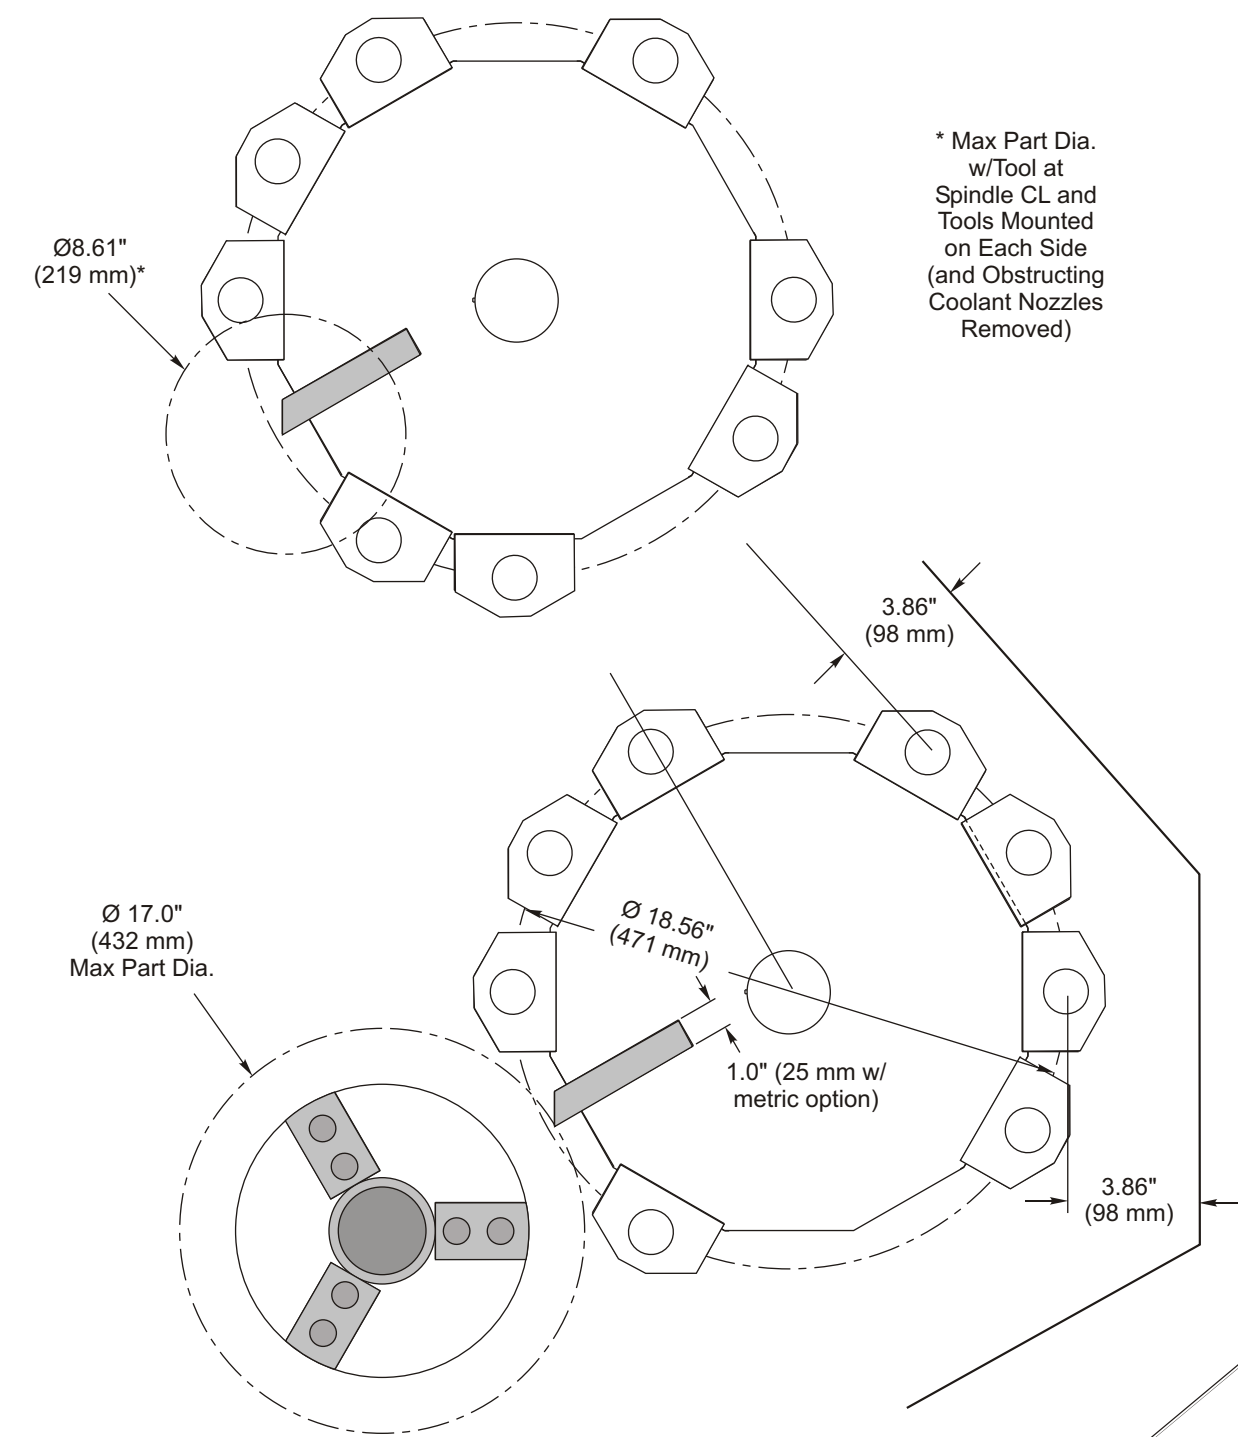

\* Max Part Dia. w/Tool at Spindle CL and Tools Mounted on Each Side (and Obstructing Coolant Nozzles Removed)

