



15150 – 25th Avenue North, Minneapolis, MN 55447-1981
 Phone 763-476-8600 Fax 763-476-4092 Visit us at: www.productivity.com
 Service Dept: (MN) 763-476-4191 (IA) 319-632-4288 (NE) 402-330-2323
 Productivity is ISO 9001:2000 Certified

Productivity Inc®

B³12VI/BL12V PRE-INSTALLATION CHECKLIST - Rev 03/2008

Installation of your new Citizen B³12VI/BL12V can be smooth and rapid if preparations are made prior to the delivery of your machine. Any questions regarding machine installation should be directed to our service department for clarification. We hope this checklist will aid in a rapid installation of your new machine. **NOTE: The following must be completed prior to our technician arriving for installation.**

- Power Requirements for your machine: 208v/3 phase/4kVa 11 Amps
 Proper voltage per machine specifications should be ready at machine site. **Do NOT power up the machine.**
NOTE: Voltage must not exceed 215V or a transformer is required to bring down to 208v.

- Customer should furnish and have available the proper supply and types of lubricants required for machine operation.

ITEM	CAPACITY	FLUID TYPE
Cutting Oil	30 Gallons	Hangsterfers Hardcut 5318
Way Lube	5 Gallons	Mobil Vactra #2

You will need to have these lubricants on hand at time of installation.

- Air lines should be routed to the machine location and operational for proper air pressure.

Air pressure and air flow rate for air-driven equipment	0.4 MPa · 50 NI/min
---------------------------------------------------------	---------------------

- *If a Bar Feeder is to be installed with the machine, make sure you have the collets and guide bushings on hand for both the machine and bar feeder, to properly check the accuracy of the machine/bar feeder operation.*
- Machine location should be planned to allow enough room for access panels to be opened and serviced with ease. A minimum of 36" clearance around the machine and barfeed is required.
- Weight requirements should be checked to insure that the surface below the machine will have sufficient strength for support and stability. The machine must be set on a solid, sound and stable, steel bar-reinforced concrete slab poured directly on the grade. In general, the 6" concrete floor on industrial buildings is suitable for machine placement.
- **The machine should be off loaded using a forklift with a capacity of at least 6,000#, and forks 8' in length. Upon arrival of your machine, unpack/uncrate and immediately check for visible damage.**

SHIPPING WEIGHT	SHIPPING DIMENSIONS OF MACHINE
2,600# (in crate)	8' L x 4.6' W x 6' H (in crate)
Ikura LUB Barfeeder (opt)	18' x 3' x 4' (crated)
Operational (see layouts attached): BL12V is approximately 48" L x 30" W x 59" H, apprx 2,110# B12VI is approximately 98.4" x 63" W x 60.63" H, approx 1,600#	

- Remove as much preservative from the machine as possible without having to power up (tables – slides, pulleys, etc.). We recommend mineral spirits to clean. Apply oil when finished to prevent rust.


PLEASE FORWARD THIS TO THE APPROPRIATE PERSON. THANK YOU.

If ordering a High Pressure Coolant System:

The 5-Line or 10-Line HPC Unit will require a separate 40 Amp power drop/source. The units take up approximately 5' L x 4' W of floor space and is generally placed just to the right of the machine and behind the barfeeder. For more information or other questions regarding the High Pressure Coolant Systems, please contact your salesperson or our Service Dept at 763-476-4191 (MN), 319-632-4288 (IA) or 402-330-2323 (NE).


B12VI Layout – Machine weight approximately 1,600#

B12VI FLOOR LAYOUT

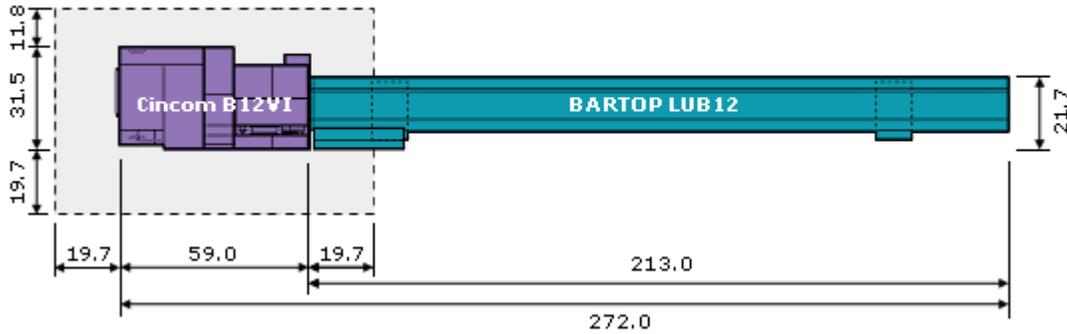


3

BL12V Layout – Machine weight approximately 2,110#

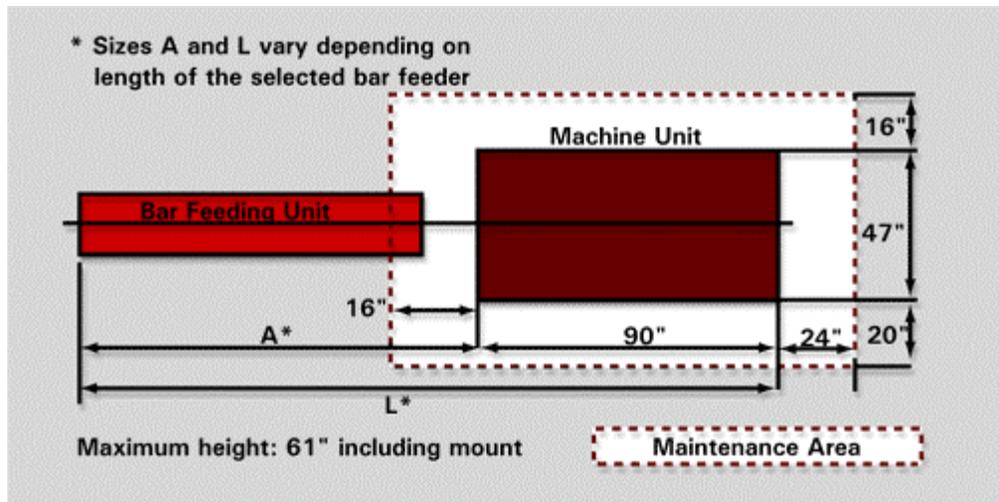

If ordering the Citizen Ikura Barfeeder:

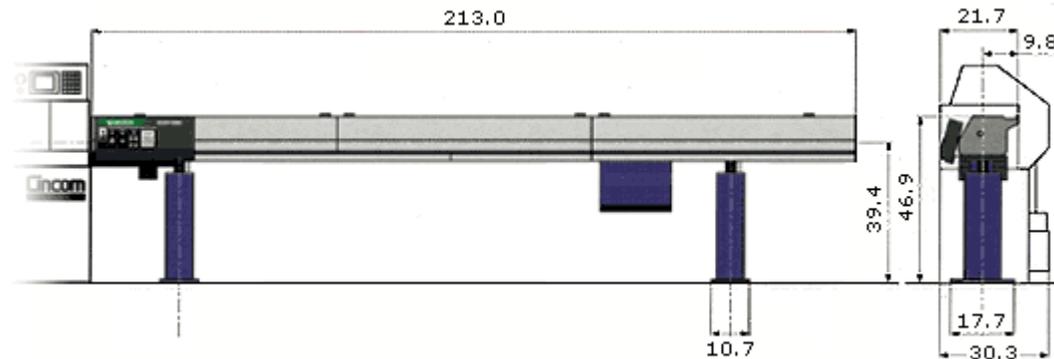

All specifications are subject to change without prior notice.

Specifications

Footprint	17'9" x 1'5.7"
Maximum bar length	12'6"
Weight	660 lbs
Power requirements	0.5 KVA
Bar diameter range	5/64" – 1/2"
Bar storage capacity	60 bars @ 1/8"
Remnant treatment	Servo rear remnant retraction